




Bolt the latch keep to the post and the latch holder to the gate.

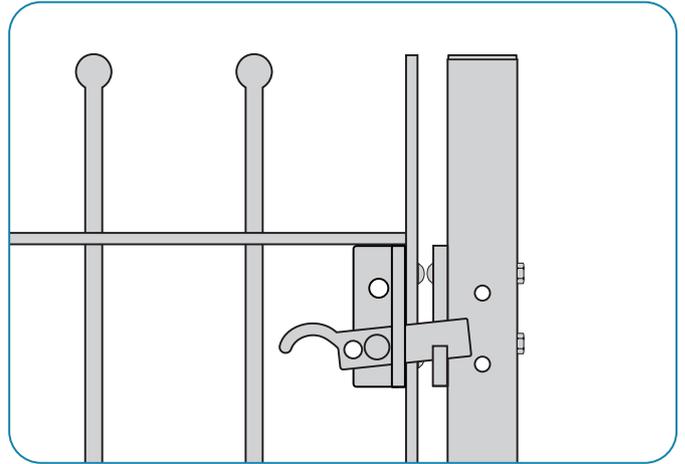


Bolt the latch to the latch holder, don't over tighten so that the latch can move easily.

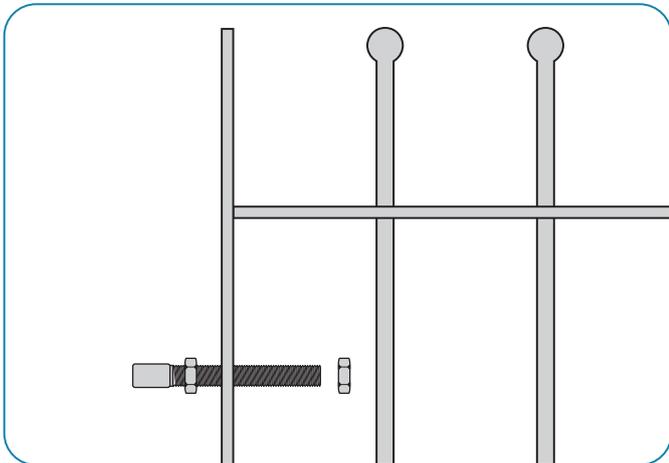


Fit one of the adjustable gate eyes to the top corner on the hinge side of the gate.

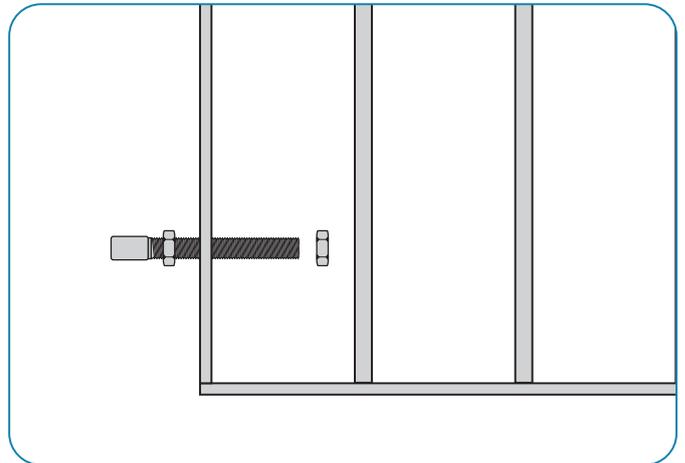

Fit the other adjustable gate eye to the bottom corner of the gate.

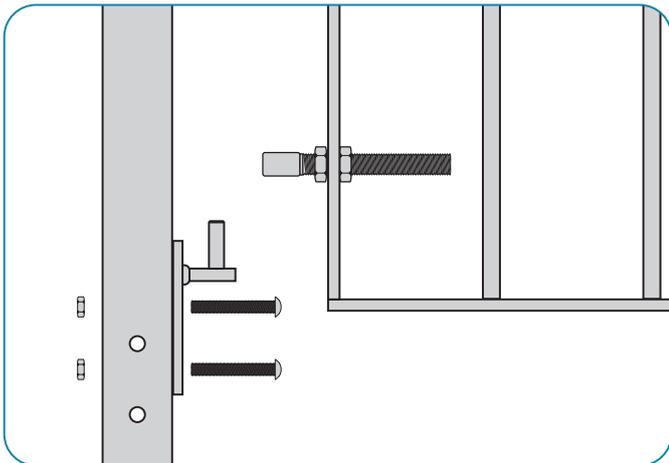


Fit one of the bolt on hinge pins to the lower section of the hinge post and fit to gate eye.

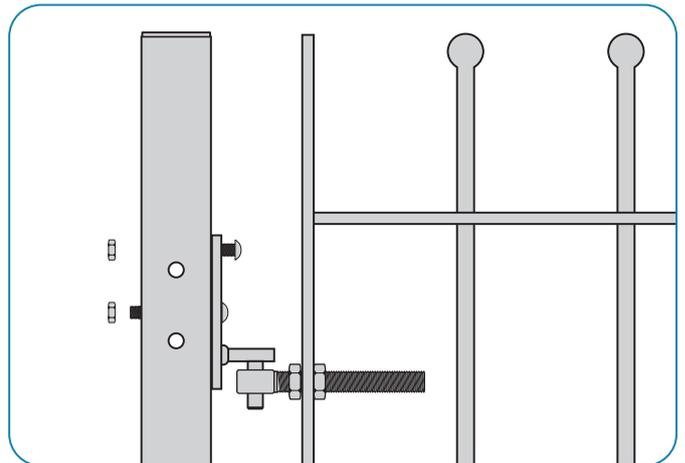

Fit the other gate pin through the upper gate eye and secure to the post.

Updated: 02-03-2021

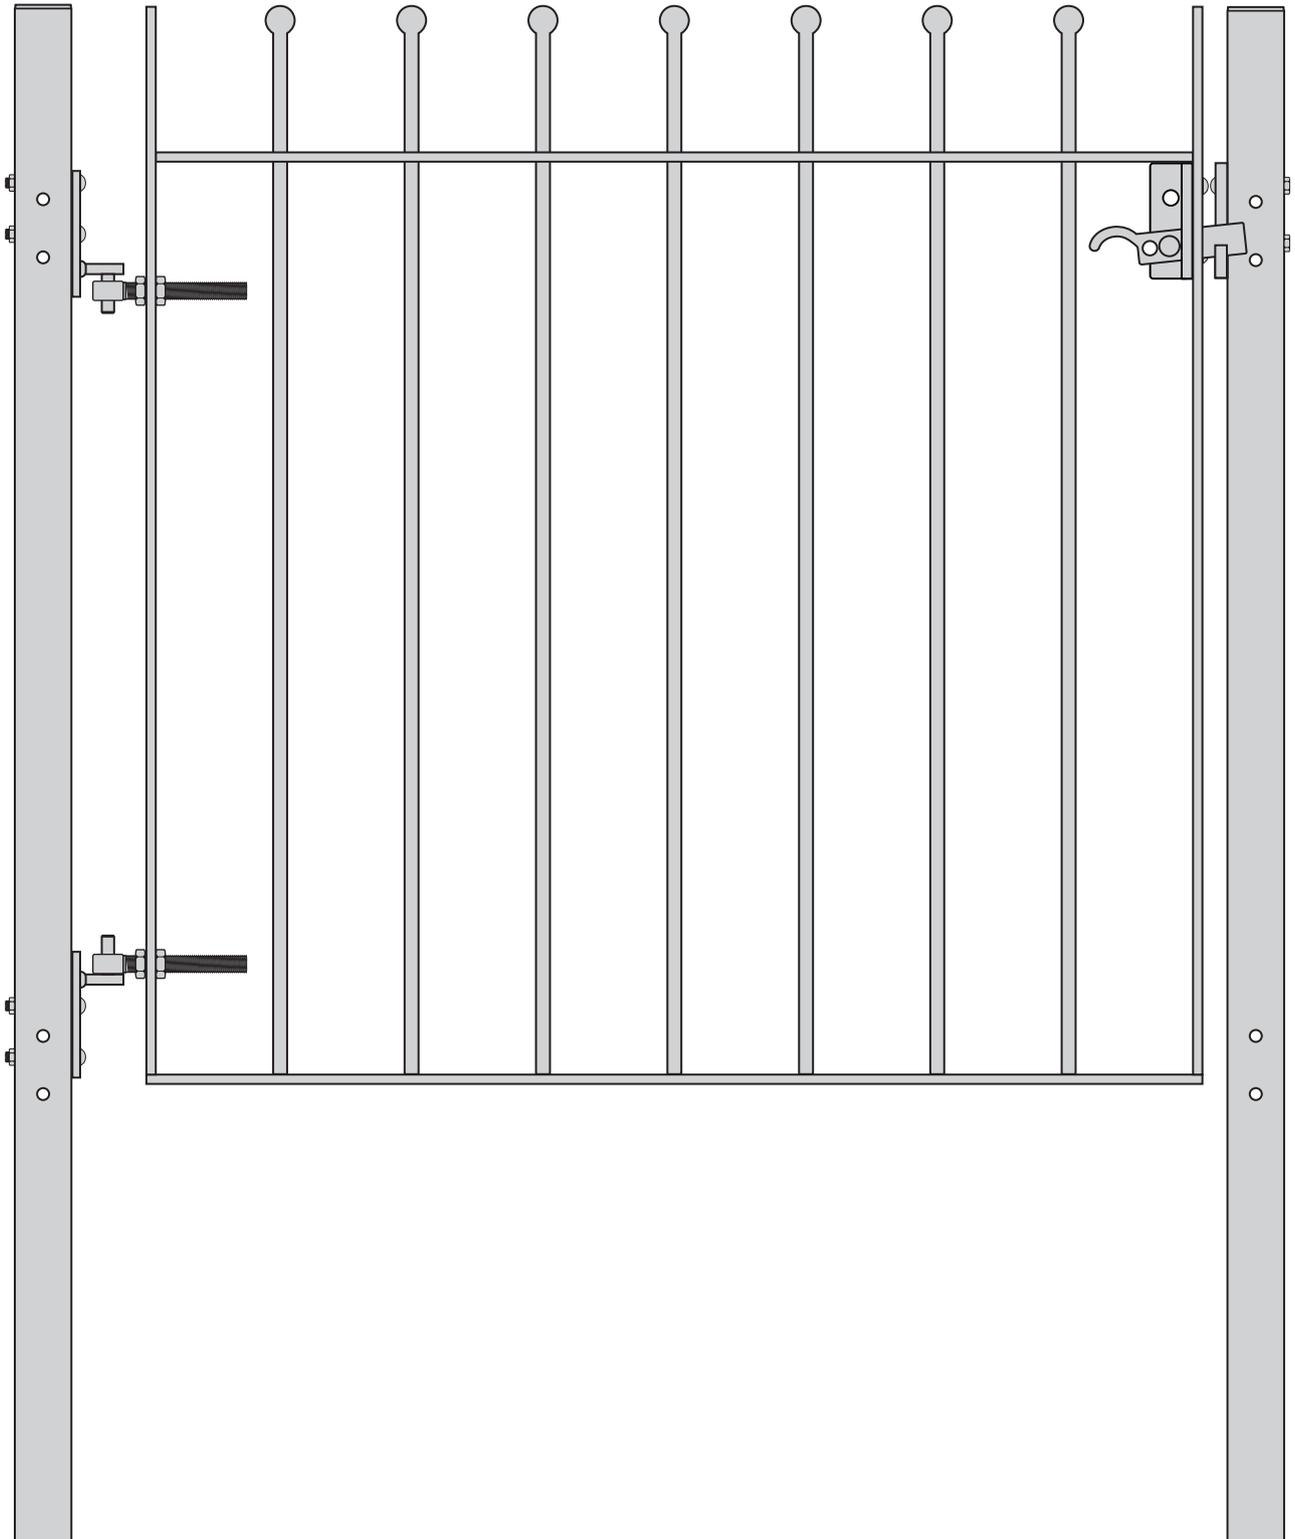

Updated: 02-03-2021