



When setting out your spindles use the pivot point of the bracket as a centre point for the spindle. Don't line up the edges of the brackets as this will not work.

