

If the unit is to be fitted to a right hand hung door (hinged on the right) the unit is ready to be fitted. If the handing needs to be changed to suit a left hand hung door (hinged on the left) the following instructions will need to be followed.

Changing Keypad Handing

1. Turn the keypad over and remove the 2 screws either side of the spindle follower as per **Fig.1**.
2. Lift the cover plate off to expose the handing pin underneath as per **Fig.2**.
3. Remove the handing pin located in 'R' hole and rotate the handing disc clockwise so that the 'L' is on the bottom as per **Fig.3**.
4. Place the handing pin in the 'L' hole and refit the cover plate with the 2 screws. When refitting the cover plate, ensure that it is facing as per **Fig.4** and screws down flush.
5. Test the keypad to ensure that the knob is free rotating clockwise and solid when turning anti-clockwise.

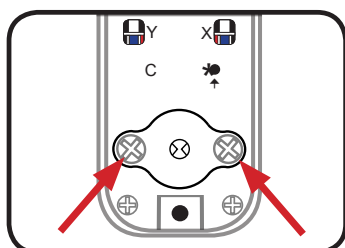


Fig.1

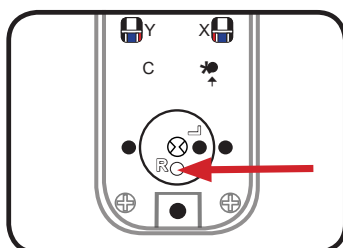


Fig.2

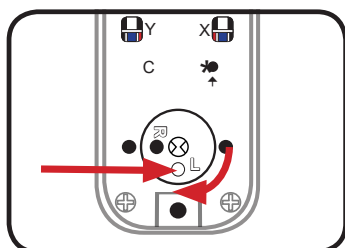


Fig.3

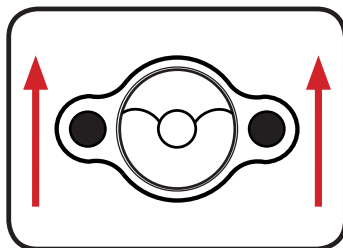


Fig.4

Changing Rim Deadbolt Handing

1. Turn the rim deadbolt over and remove the 4 screws as per **Fig.5**.
2. Lift the cover plate off to expose the deadbolt underneath.
3. Horizontally flip the deadbolt over to as per **Fig.6**.
4. With the deadbolt in position, refit the cover plate with the 4 screws.
5. Test the deadbolt to ensure that the knob throws and withdraws the deadbolt.

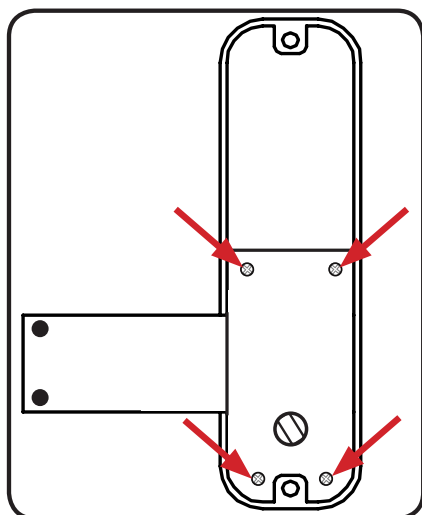


Fig.5

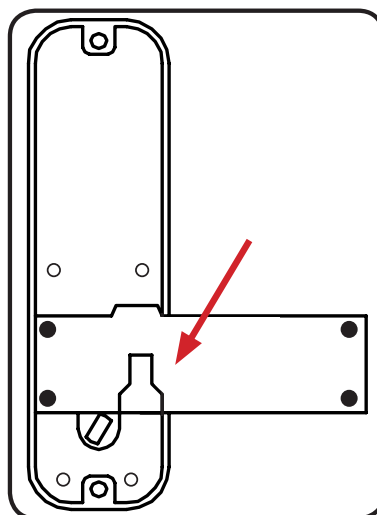


Fig.6