


BL3030 MG Pro ECP Models - Handing & Push/Pull Guide

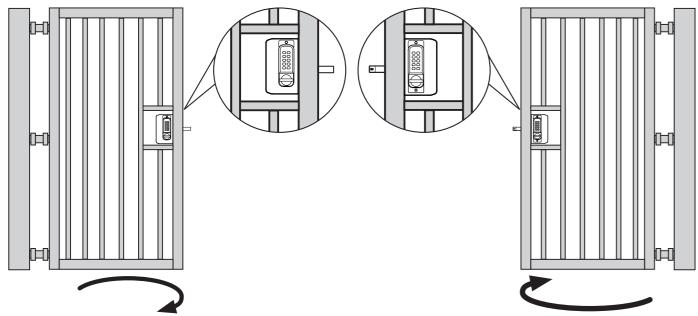


BL3030 MG Pro ECP - PUSH LEFT HAND




Internal Keypad Side of Gate Hinged on the Right

Opens away from you when opening

BL3030 MG Pro ECP - PUSH RIGHT HAND

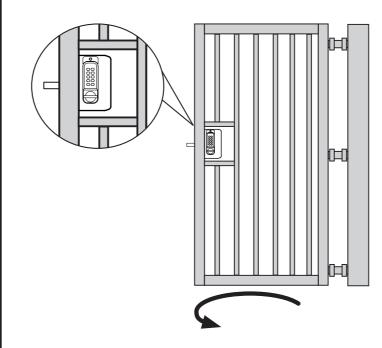


Keypad Side of Gate
Hinged on the Right
Opens towards you when opening

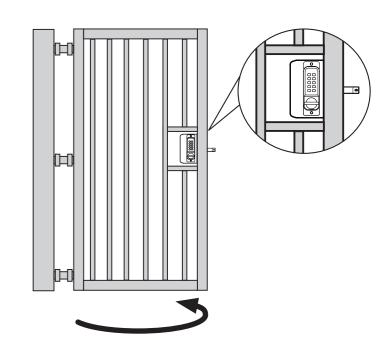

Internal Keypad Side of Gate
Hinged on the Left
Opens away from you when opening

BL3030 MG Pro ECP - PULL LEFT HAND

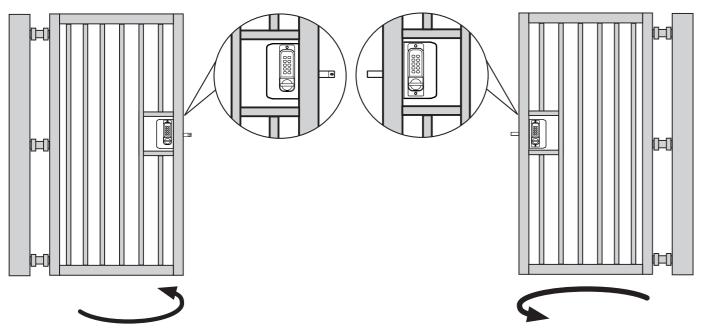

Keypad Side of Gate

Keypad Side of Gate

Hinged on the **Left**


Opens towards you when opening

Hinged on the **Left** Opens away from you when opening

Internal Keypad Side of Gate


Hinged on the **Right**Opens towards you when opening

BL3030 MG Pro ECP - PULL RIGHT HAND

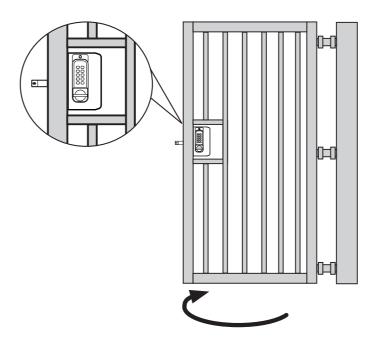

Keypad Side of Gate

Hinged on the **Right** Opens away from you when opening

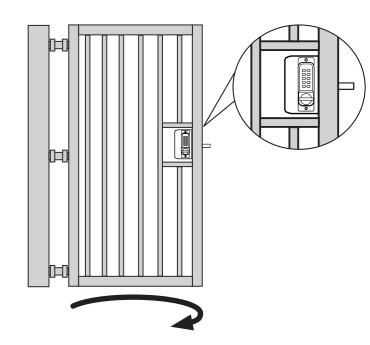

Internal Keypad Side of Gate

Hinged on the **Left** Opens towards you when opening