



**When fitted to gate use the bar to tension the spring. Once the required tension is found insert the locking pin into the appropriate hole**