


Updated: 05-08-2021

**Maximum Gate Weight 50kg**


**Maximum Gate Width 1m**

- The gate closer can be fitted to the top, middle or bottom of the inside of the gate
- The gate face must be flush with the gatepost face and hinged as close as possible to the post
- The gate closer pivot point must be in line with the pivot point of the gate hinges
- The gate must swing freely prior to fitting the gate closer and the hinges should be greased regularly
- The gate should not be allowed to opened more than 90° or the gate closer will be damaged, fit a gate stop if needed


1. Take the cap off the end of the gate closer and slide out the guide roller. From the centre pivot point of the hinges, measure 222mm and fit the guide roller in this position.

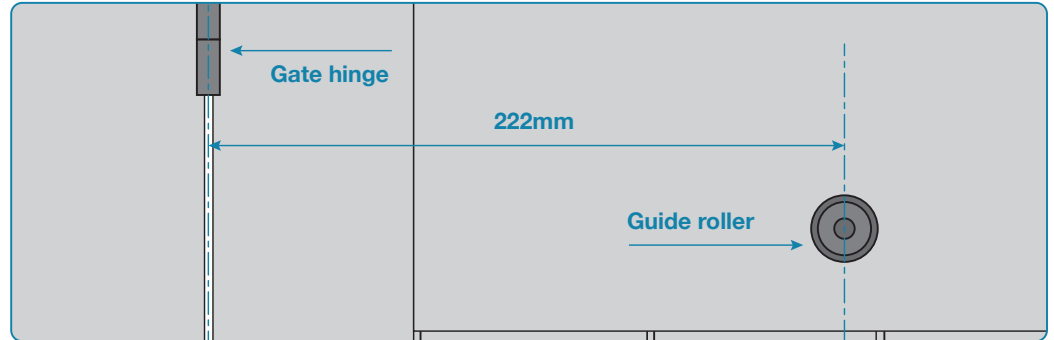


2. Slide the gate closer back over the guide roller and refit the end cap.

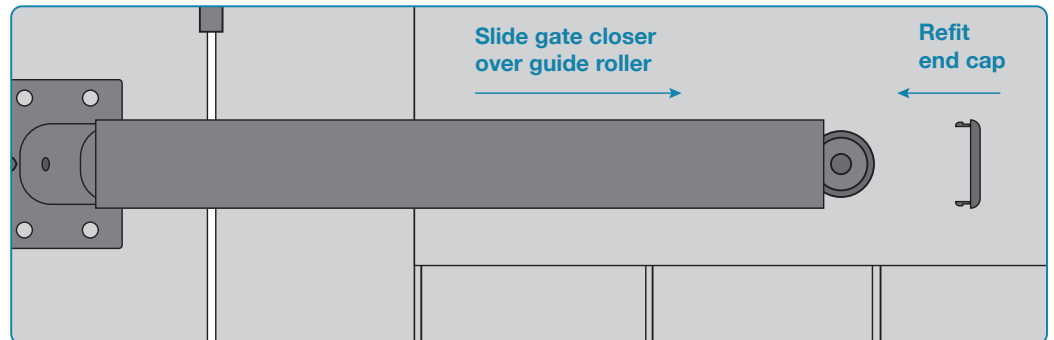

3. Fit the gate closer securely to the gate post with the screws provided, ensure the pivot point of the gate closer is in line with the hinges.

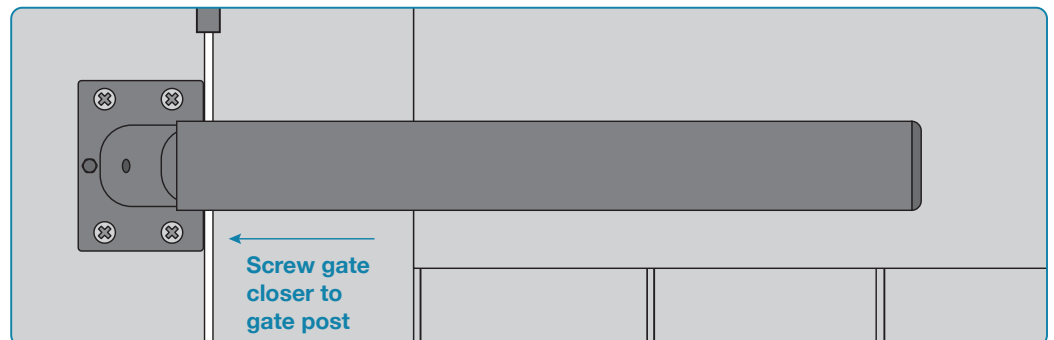

4. Open the gate slightly to let the holding pin drop free. Adjust the closing speed of the closer while holding the gate 45° open using the screw in the end cap, adjust latching speed in the same way with the gate closed.

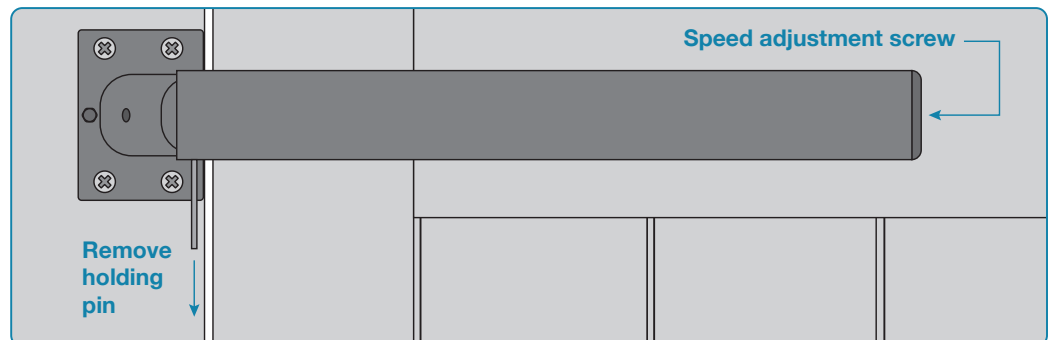

Updated: 05-08-2021