





When hinges are fitted and spring is installed take the gate and align slotted pin with the upper tang of the spring, lower the gate into position. Set gate in its closed position. Turn the bolt half a turn in either a clockwise or anti-clockwise direction, depending on the desired direction of swing. Over tension will damage the spring.

