



1. Remove the two grub screws (a & b) on the top and bottom of the paddle hinge. This will allow the hinge pin to come free and the paddle to be removed exposing the mechanism.

2. Remove the top centre and bottom centre screws (c & d) in the mechanism to allow it to come free from the lock body.

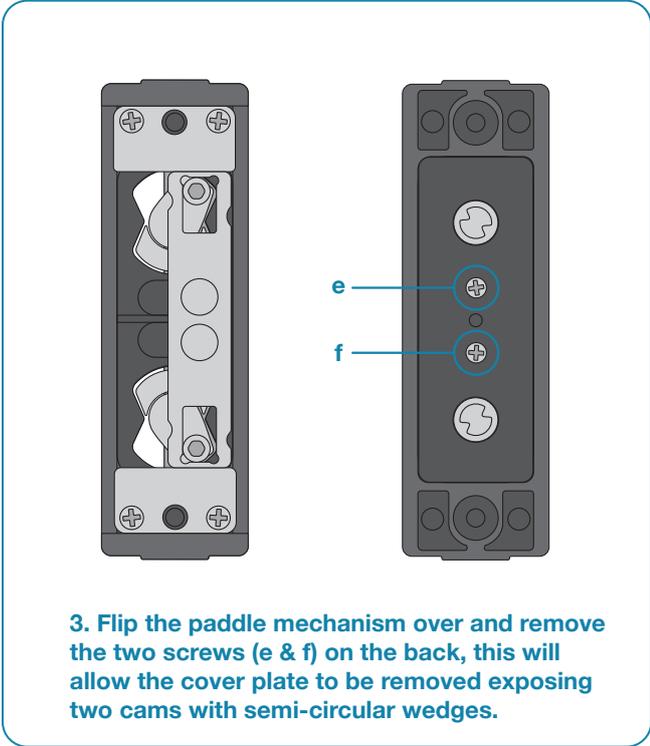


3. Flip the paddle mechanism over and remove the two screws (e & f) on the back, this will allow the cover plate to be removed exposing two cams with semi-circular wedges.

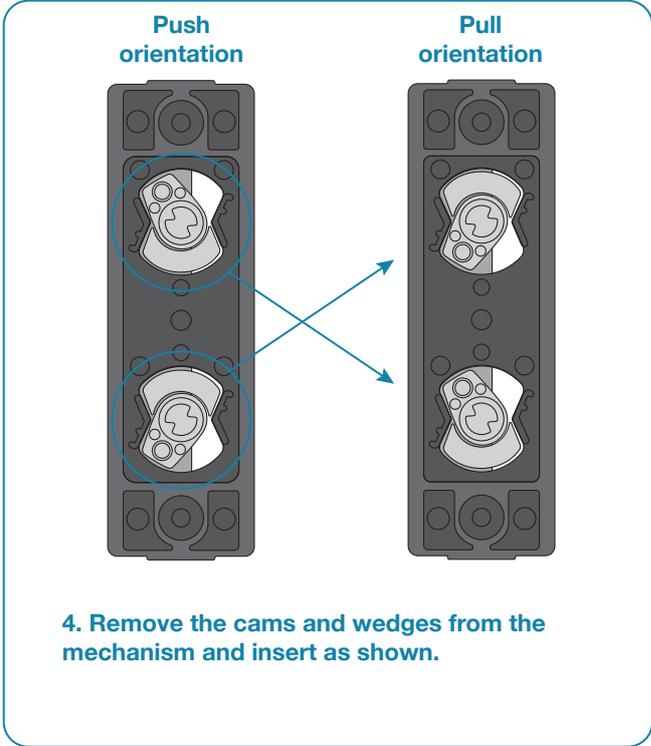


4. Remove the cams and wedges from the mechanism and insert as shown.

Updated: 27-10-2022

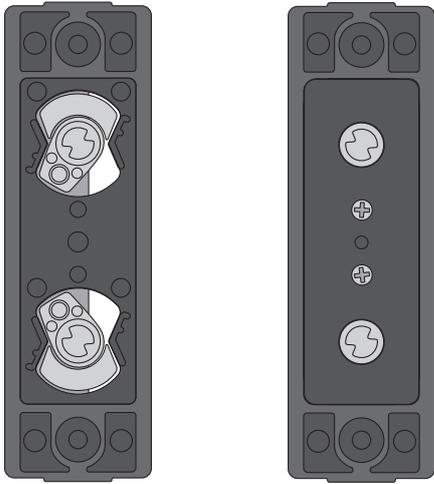


5. Once cams and wedges are in the required orientation refit the cover plate with the two screws removed in step 3. Flip the mechanism over again.

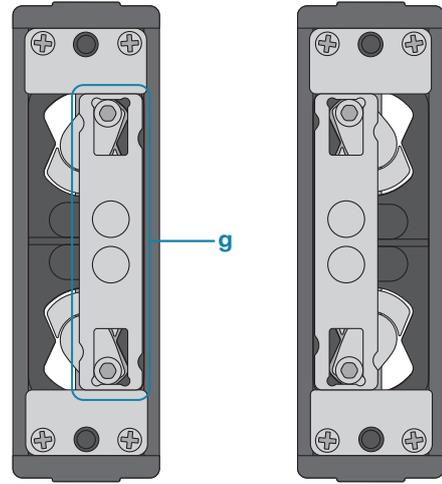

6. For pull action, the bar (g) needs to be closer to the latch bolt, rotate the mechanism 180° if required before refitting to the lock.

7. Refit the paddle mechanism to the body of the lock with the two screws removed in step 2. Position the paddle back into place and insert the hinge pin, secure with the two grub screws removed in step 1.

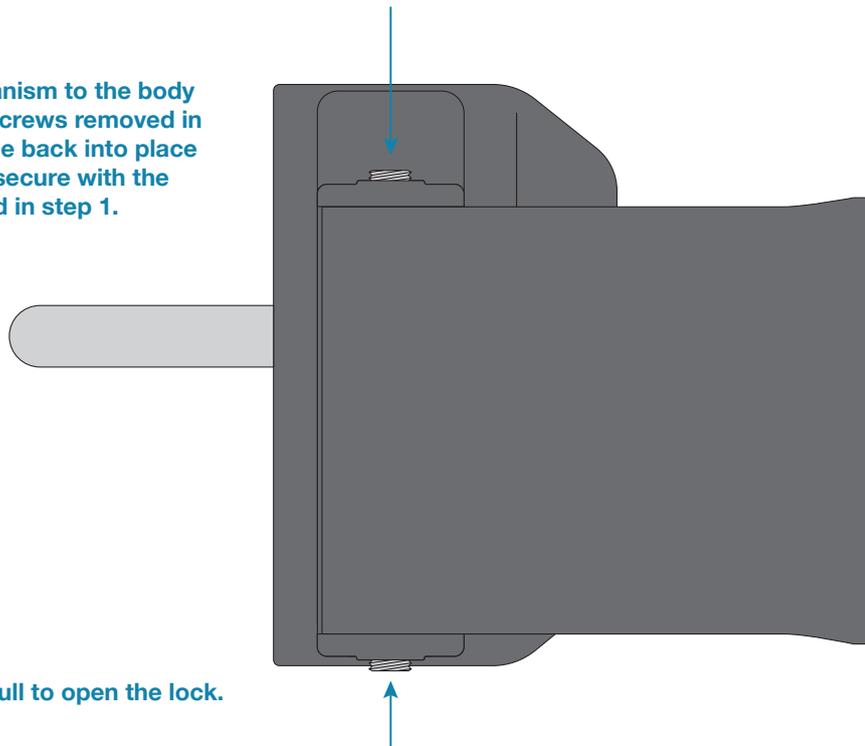

The paddle should now pull to open the lock.

Updated: 27-10-2022